



Alternator Decoupler Pulleys Tool Kit

Designed, Engineered and Produced by the Original Equipment Manufacturer

With 100 years of innovation and experience, Gates delivers the highest quality parts in the Aftermarket today. Gates offers a complete line of Alternator Decoupler Pulleys (ADPs) designed for each specific application. Gates also has the tools needed for dependable, trouble-free ADP installation.

Introducing the Gates ADP Tool Kit



Part No. 91024

The Gates ADP Tool Kit includes all of the tools required for ADP removal and installation. This handy Tool Kit includes eight tools designed to R & R all vehicles that utilize ADPs found on the road today. One kit eliminates the need to shop around for hard-to-find tools and reduces service bay downtime that can take a toll on dealer profits. The Gates ADP Tool Kit includes:


Part #	Description	Part #	Description	Part #	Description
91024-1	H22 x 33T	91024-4	H10	91024-7	1/2" Drive x S10
91024-2	H21 x H28	91024-5	1/2" Drive x H10	91024-8	1/2" Drive x H8
91024-3	H17 X H19	91024-6	1/2" Drive x T50		

**For more information about the Gates ADP line,
visit www.gates.com/adp**

Gates ADPs are OE Manufactured

ADP Applications							
Make	Model	Year	Engine	Part #	ADP	Tool	
Audi	TT	2000-2006	1.8L	37013P	OWC	91024-1	
	A3 & TT	2007-2011	2.0L				
	A3 & TT	2006-2009	3.2L				
	A4, A5, S5	2010-2011	2.0L, 3.0L, 3.2L, 4.2L	37103P	OAD		
BMW	325i, 328i, 328Xi, 330i, 525i, 525Xi, 530i, 530Xi, Z4	2004-2009	2.5L and 3.0L	37021P	OWC	91024-3	
Buick	Lucerne	2009-2011	3.9L	37027P			
Cadillac	CTS	2010-2011	3.0L and 3.6L				
Chevrolet	Cobalt, HHR (2008-2010)	2005-2010	2.0L	37016P	OAD		
	Corvette	1997-2004	5.7L	37009P			
	Corvette	2005-2007	6.0L	37023P			
	Impala, Malibu	2006-2011	3.9L	37022P			
Chrysler	Voyager, Town & Country, Pacifica	2001-2007	3.3L/3.5L/3.8L	37015P	37018P		91024-3
	Sebring, Jeep Compass & Patriot	2007-2008	2.4L				
Dodge	Avenger, Caliber	2001-2007	1.8L/2.0L/2.4L	37015P			
	Caravan, Grand Caravan		3.3L and 3.8L				
Ford, Mercury	Crown Victoria, Grand Marquis	2000-2011	4.6L 190A/200A Alt	37004P			
Lexus	ES350, GS350, IS250, RX350	2009-2010	2.5L and 3.5L	37026P			
Mercedes-Benz	E300D	1996-1997	3.0L Diesel	37011P	OWC	91024-1	
Pontiac	G6	2006-2010	3.9L	37022P	OAD		
	Solstice	2007-2010	2.0L	37024P			
	Vibe	2009-2010	1.8L	37015P			
	Vibe		2.4L	37017P			
Porsche	Boxter, Cayman, 911	2000-2009	2.7L/3.2L/3.4L	37014P	OWC	91024-1	
Saturn	Ion	2004-2007	2.0L	37016P	37024P	91024-3	
	Sky	2007-2010		91024-1			
Scion	XB	2008-2011	2.4L	37017P	OAD	91024-3	
	XD	2008-2010	2008-2010	37015P			
Toyota	Camry, Corolla, Matrix, Rav 4, Solara	2006-2010	2.4L	37017P			
	Camry	2010-2011	2.5L	37028P			
	Celica, Corolla, Matrix	1998-2010	1.8	37015P			
	Avalon, Camry, Highlander, RAV4, Sienna, Venza	2005-2011	3.5L	37026P			
	4 Runner	2010-2011	2.7L and 4.0L				
	Tacoma	2007-2011	2.7L	37025P			
VW	Beetle	1998-2001	1.9L Diesel	37012P	OWC	91024-1	
	Passat, Jetta, Golf	1995-2002		37010P			
	Beetle, Golf, Jetta, Passat	1998-2008	1.8L & 2.0L Gas, 1.9L Diesel	37013P			
	Eos, GLI, GTI	2007-2009	2.0L and 3.2L				
	Touareg, Touareg 2	2004-2008	5.0L Diesel	37020P			

Gates Alternator Decoupler Pulleys are designed, engineered and produced by the original equipment manufacturer.

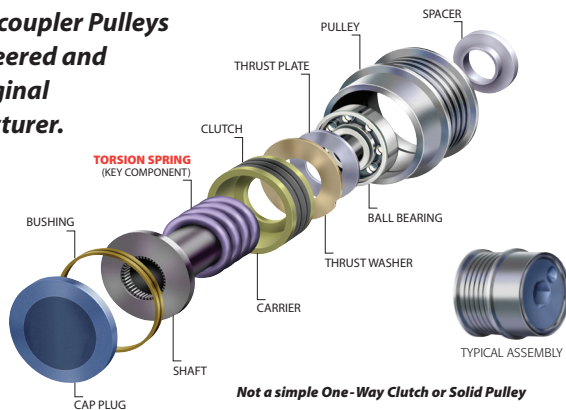

Not a simple One-Way Clutch or Solid Pulley

OWC = One-Way Clutch

OAD = Overrunning Alternator Decoupler

* For a complete up-to-date application list, go to www.gates.com

A Closer Look at an OAD Assembly



1551 Wewatta Street, Denver, CO 80202
gates.com